

Setting the time and date

For Prostar 816 series Samsung phone systems

Without lifting the handset

Dial #04. The display will show MMC Disabled.

Dial 4321, then 1 and press # .

Press the # key again and dial 55. The display will show
YYMMDDW:HH and then the current date and time is displayed

Enter the new information as follows

YY = Last two digits of the year

MM = Month (1-12)

DD = Day of the month (01-31)

W = Day of the Week (1-7; the week begins on Monday and ends
on Sunday)

HH = Hour (use 24 hour clock)

MM = Minutes (00-59)

Press the # key to set the time and date. The phone system returns
to normal operation.