

Setting the time and date

Telekol Voice mail system

Dial 501

When you hear the main greeting dial *999

When prompted for the password dial 9876

When the system says no messages dial 9

You are now in administration

Dial 3 for system configuration

Dial 3 to set the time and follow the prompts